




# Low Entry Kit

Lowered front entrance for minibuses

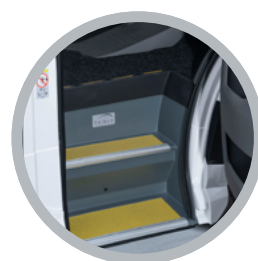





# Low Entry Step

## Create your lowered front entrance

Tribus offers a complete Low Entry Kit for vehicle body builders worldwide. Thanks to the lowered front entrance standing passengers can board easy and fast. Making your minibus much more attractive for public transport. Our Low Entry Kit is easy to install and corrosion free.



## Low Entry Kit

Tribus offers complete Low Entry Kits for Ford Transit, Volkswagen Crafter/ e-Crafter, MAN TGE/ E-TGE and Mercedes-Benz Sprinter. Our Low Entry Kits are approved and certified by the OEM's. You will not lose OEM warranty with our Low Entry Kit.

## 100% ready to install

To meet your demands Tribus offers a 100% ready to install product. Our Low Entry Kit only requires cutting and assembly, no need for welding. Depending on the vehicle type installation time is up to 8-12 hours. All products are made of prefab materials.



## Training

Tribus offers you a two-day training especially designed for workshop fitters that are going to install the Low Entry Kit. An extended installation manual will be provided when purchasing a Low Entry Kit.

## Complete interior finish

The Low Entry Kit can be upgraded with an Interior Finish. This contains a wooden front floor, a carpet floor mat for the drivers-side, floor transition strip, LED strip finishing and three grabhandles.



## Corrosion free

Owing to years of experience in manufacturing Low Entry Kits, we at Tribus realise the importance of lightweight and corrosion free materials. In close collaboration with our Innovation and Engineering department we have created a lightweight construction made of polyester and reinforced steel. The pillar extension is glued to the vehicle and therefore corrosion free.

## Key points

- \* 100% ready to install
- \* Prefab materials
- \* No welding needed
- \* Factory warranty retained
- \* Safe and fast solution



# Specifications



Commercial  
Vehicles



Mercedes-Benz  
VanPartner



Qualified  
Vehicle  
Modifier

MERCEDES-BENZ SPRINTER	DESCRIPTON	ART. NR
<b>ABS Lowered Entry Kit</b>	Colour MB 9147	V-0130358501
<b>Cabin finishing</b>	Wooden front floor finishing & Carpet floormat drivers-side & Floor transition strip & Led strip finishing.	V-0130257001
<b>Grabhandles</b>	MBS 2018 Yellow RAL 1023 - B-pillar - Dashboard - T-model behind driver	V-0130353002 V-0130353003 V-0130353001
FORD TRANSIT	DESCRIPTON	ART. NR
<b>ABS Lowered Entry Kit</b>	Colour Black matt finish*	V-0410358501
<b>Cabin Finishing</b>	Black doormat drivers side	V-0410257001
<b>Grabhandles</b>	- B-pillar - Dasboard - T-model behind driver	V-0410353003 V-0410353001 V-0410353002
VW (e)CRAFTER/ MAN (e)TGE	DESCRIPTON	ART. NR
<b>ABS Lowered Entry Kit</b>	Candy White*	V-0900358501
<b>Cabin Finishing</b>	Wooden front floor finishing & Carpet floormat drivers-side & Floor transition strip & Led strip finishing ELAF 5150.	V-0900257001
<b>Grabhandles</b>	- B-pillar - Dasboard - T-model behind driver	V-0900353000 V-0900353001 V-0900353002
* Other colours available on request.		

All rights reserved. All information may be subject to changes and typographical errors.

VK-120-200311